





How to Stake-out a Surface on Topcon V15 Pocket 3D


1. Tap "Tools" in the bottom menu then click "Stake-out".

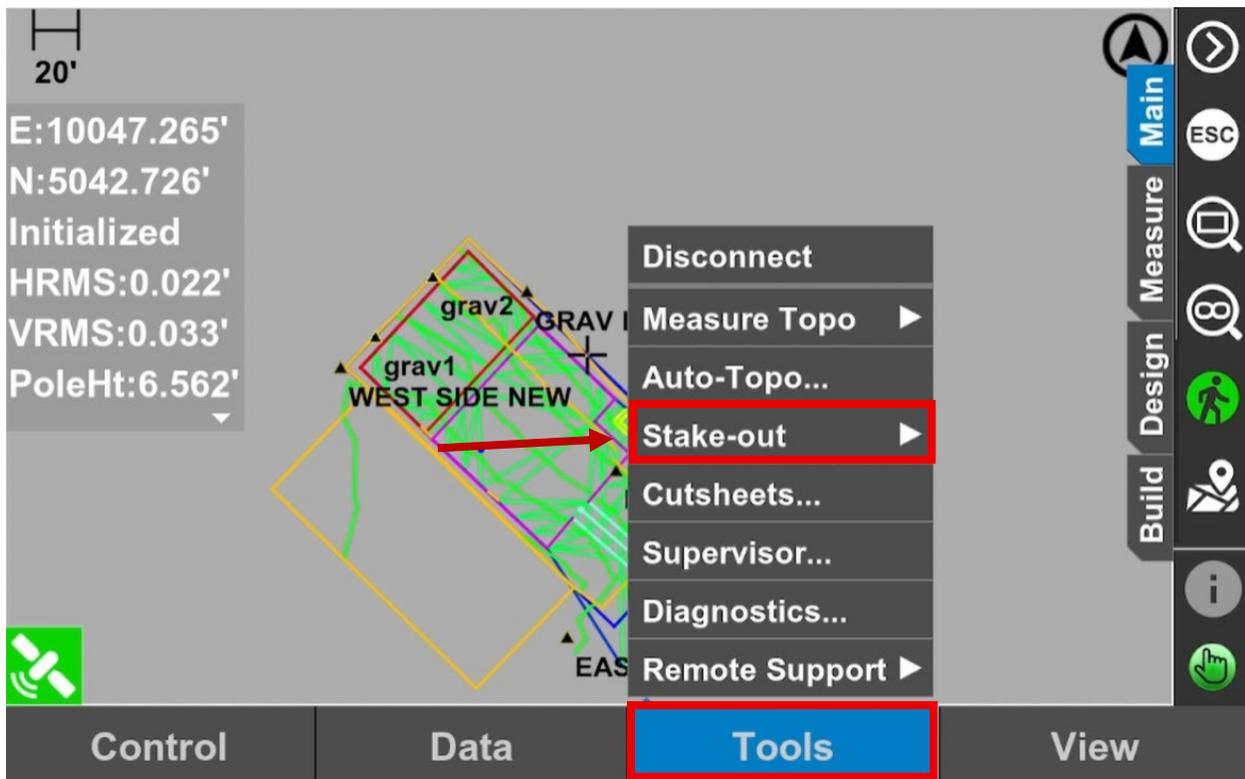


2. Select "Surface check".

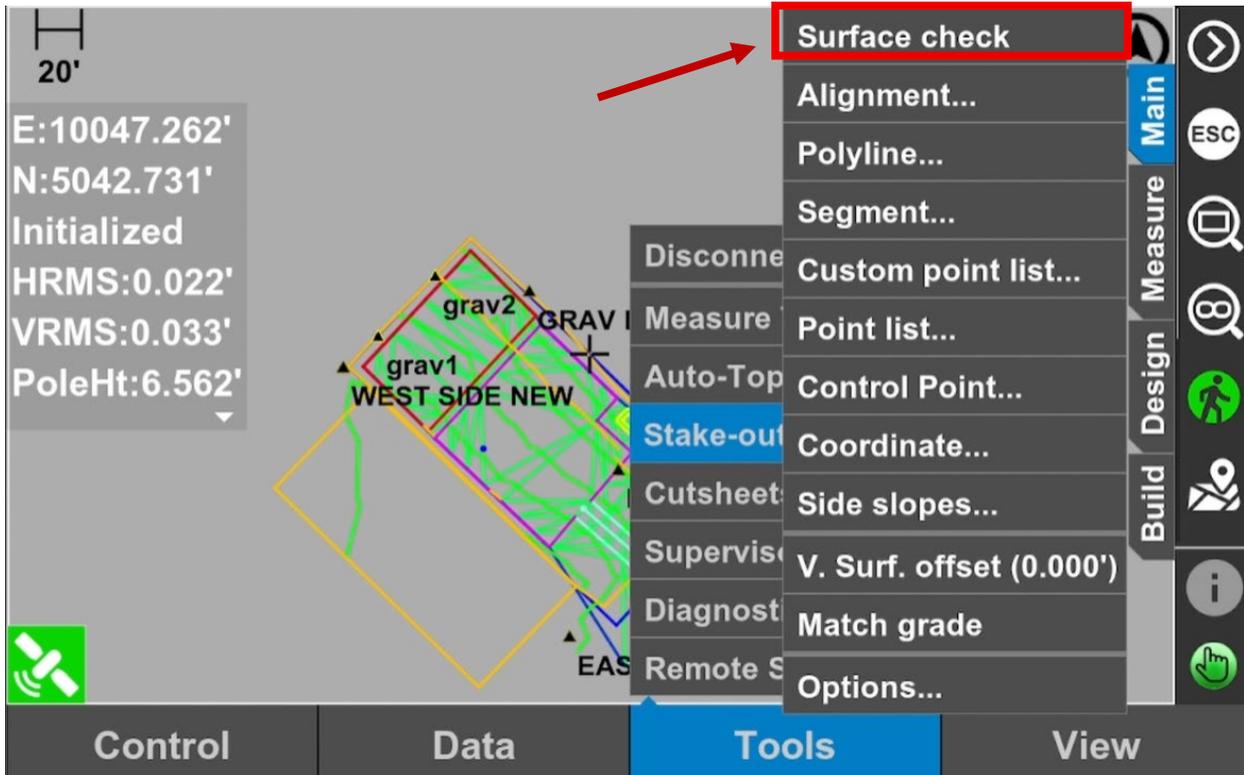


3. Follow the arrow on the top left corner, and get as close to zero as possible.

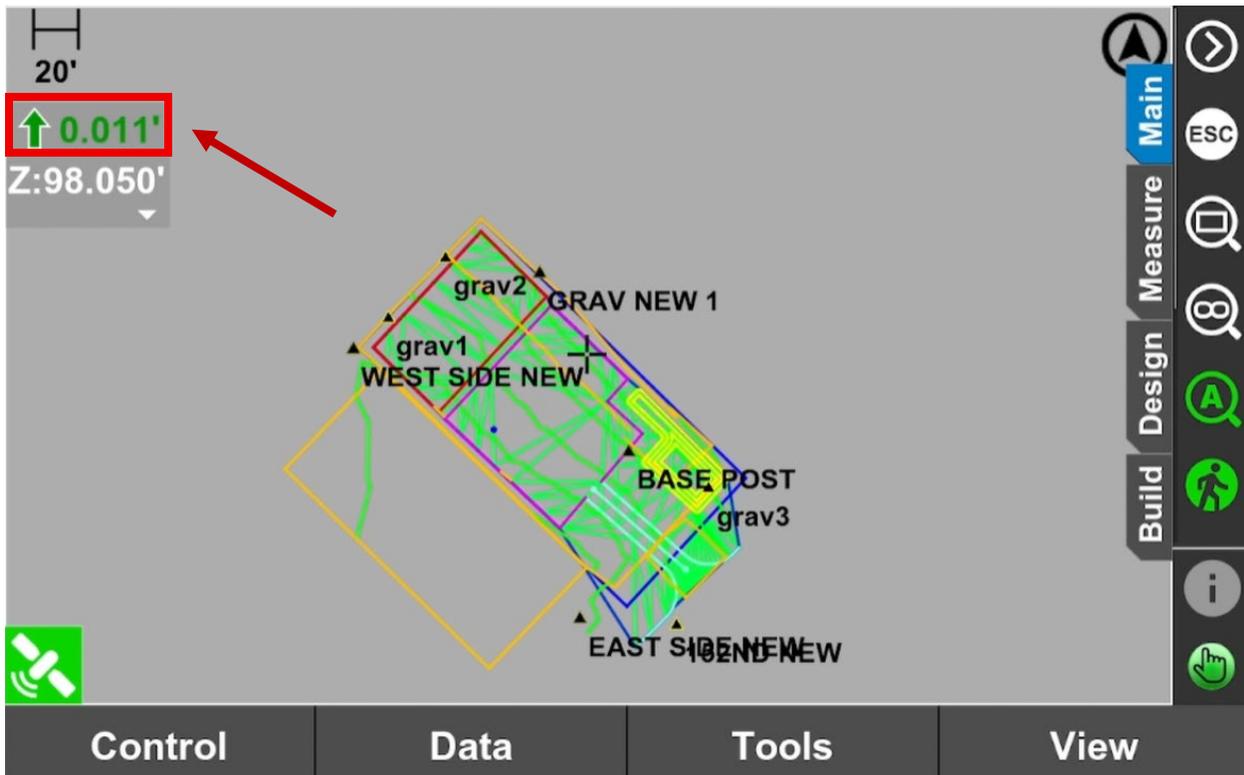


4. If you don't have a surface selected, it will say "No surface selected". To fix that, go to "Data" > "Surface" > then click "Surfaces..."

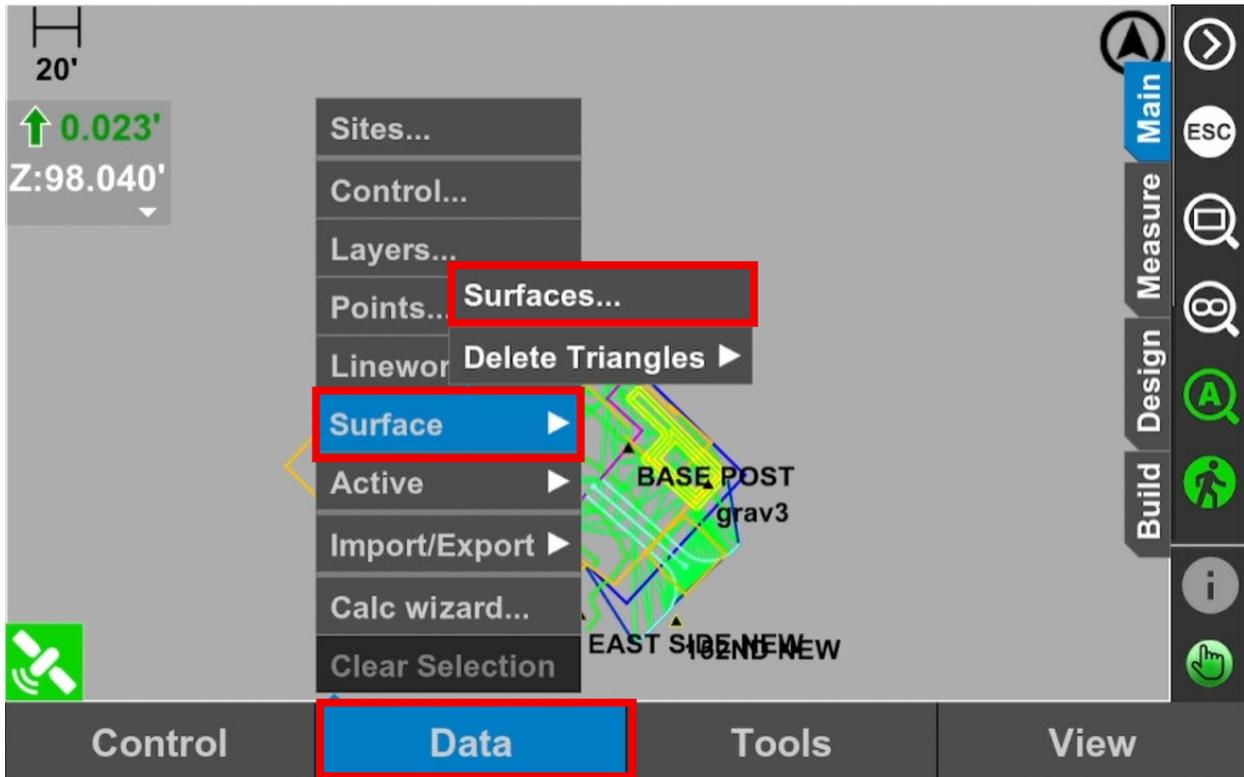


5. Select the surface you want to use then hit "Close".

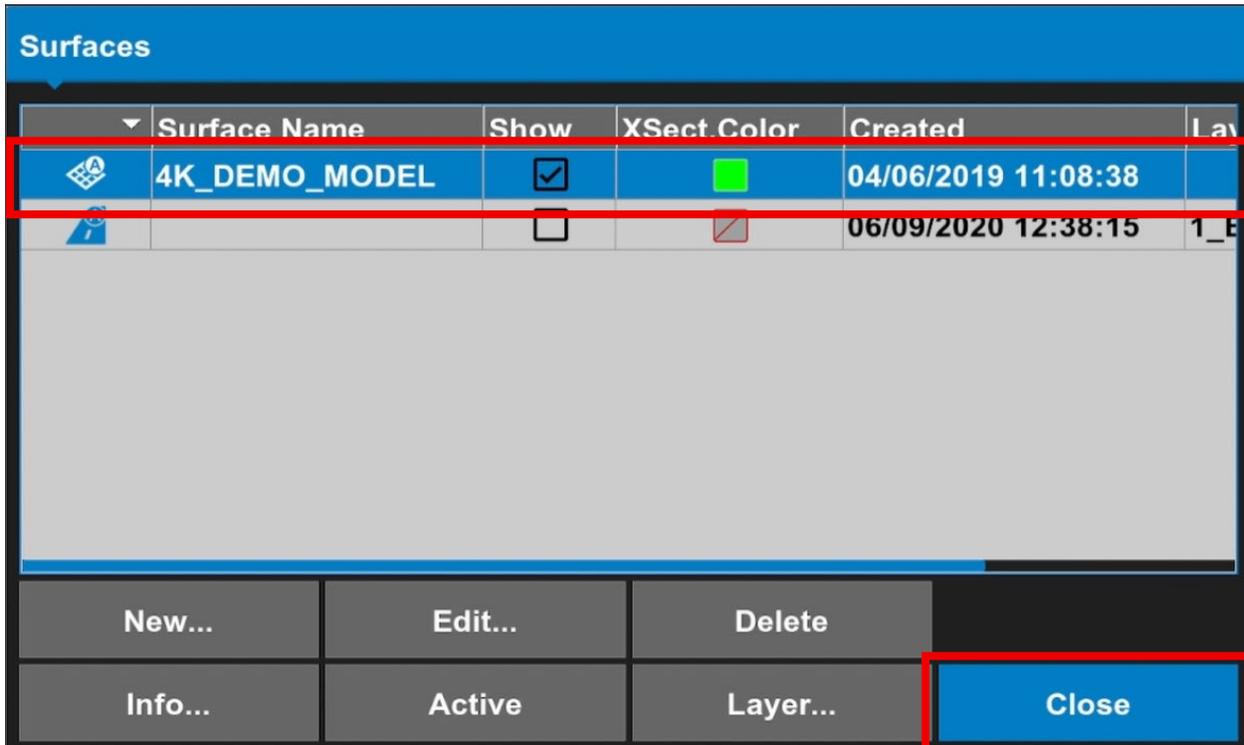


6. To add a Vertical offset to your surface, go to **“Tools” > “Stake-out”** > Then hit **“V. Surf. Offset (0.000’)”**.

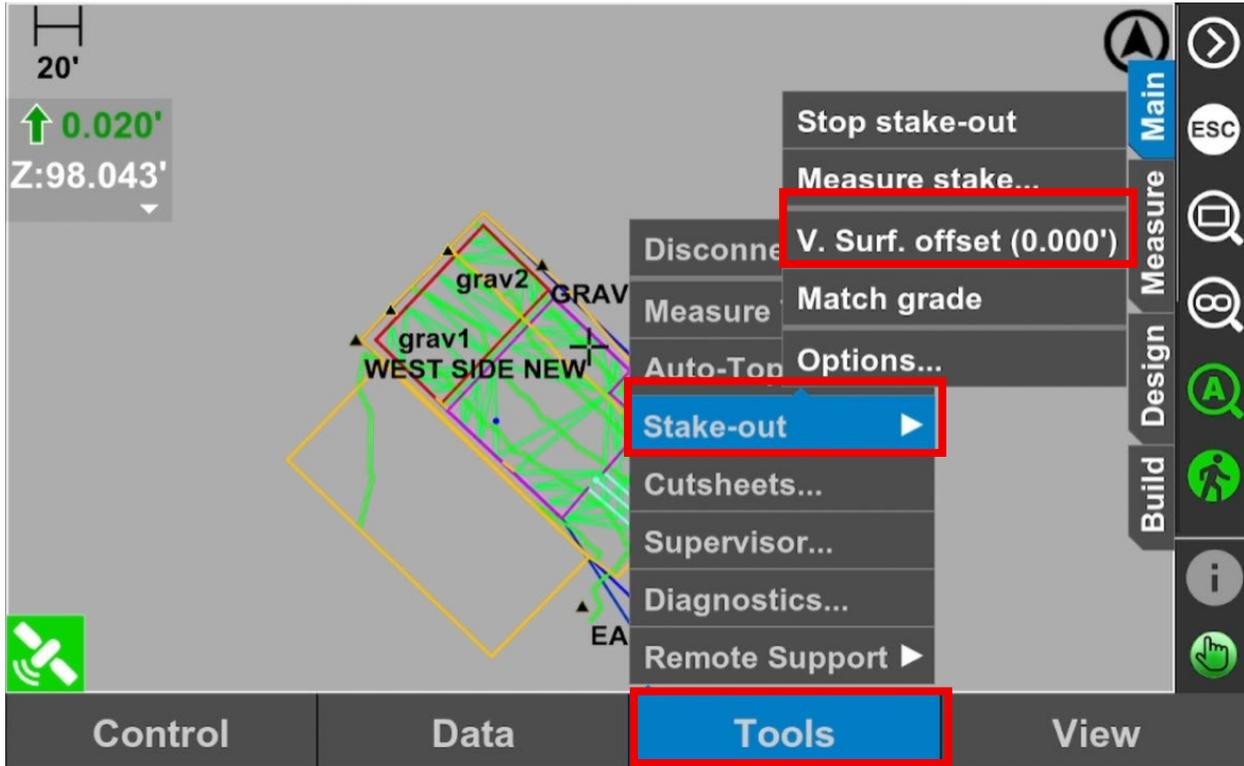


7. Set the offset measurement, then click **“OK”**.

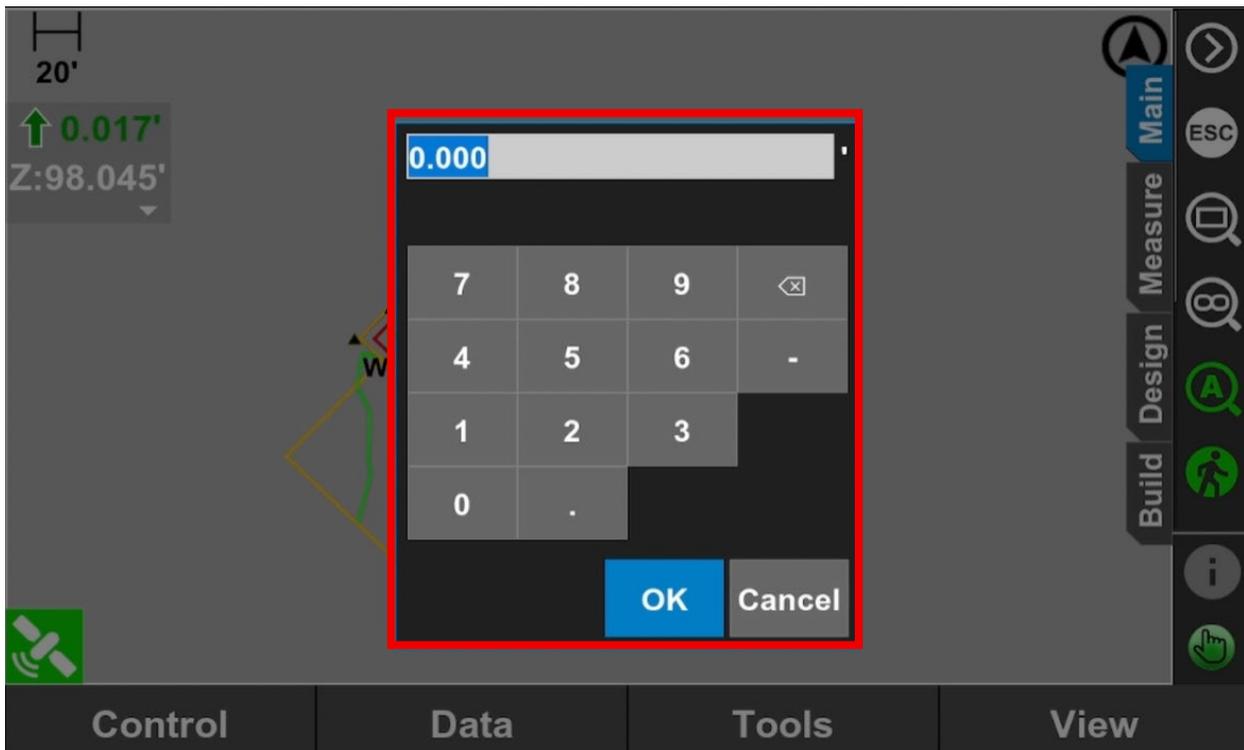

8. Follow the offset by walking towards the direction of the arrow in the top left corner.
(Important: Each time you do a Vertical offset, repeat step 6 once you are done and set the offset to zero so it will return to normal/default)

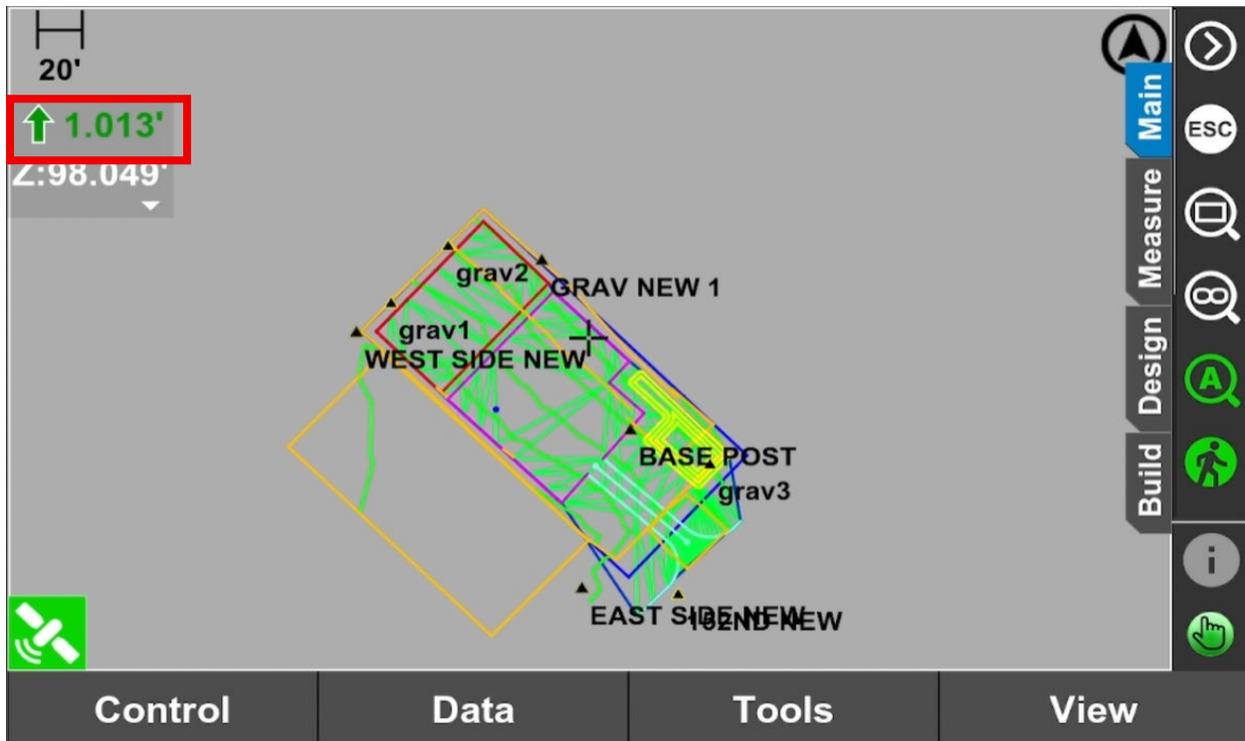

9. To stop the stake-out, click "Tools" > "Stake-out" > then click "Stop stake-out".

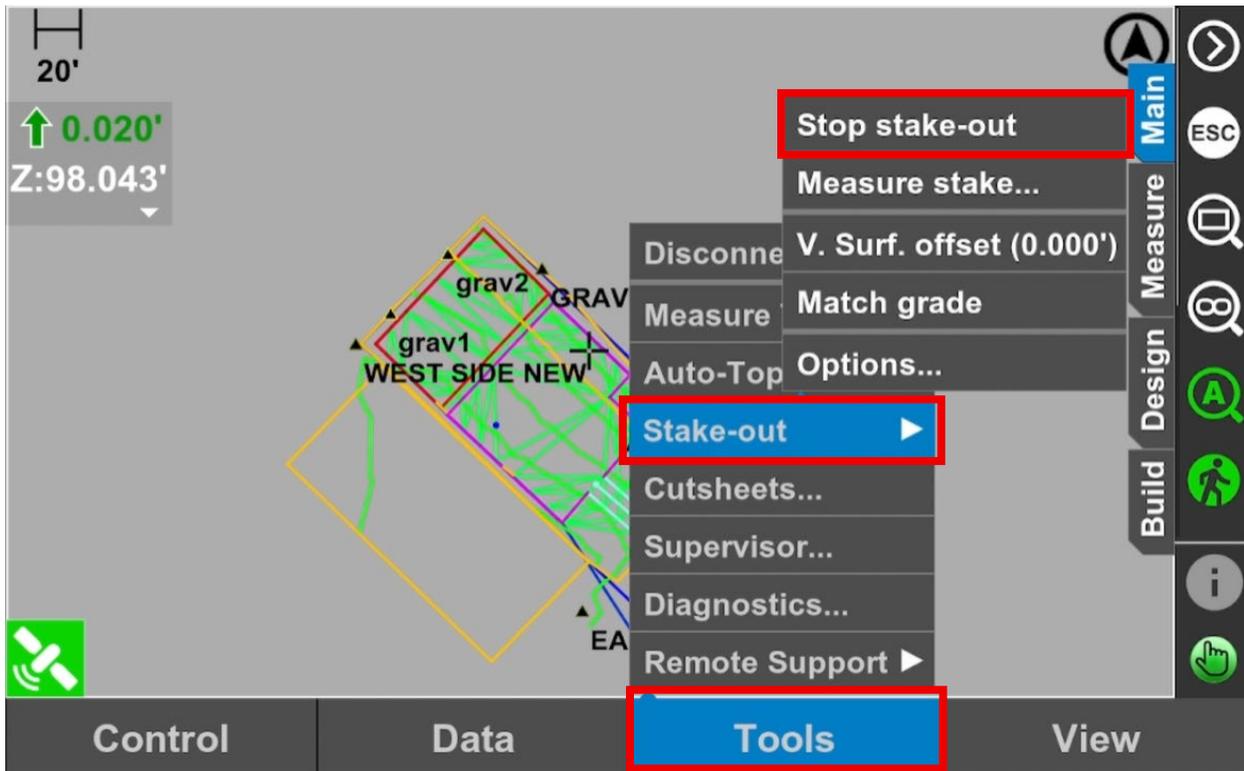

5900 NE 152nd Ave. Suite 120 Vancouver, WA 98682

Phone: (564) 274-0024 | Fax: (360) 635-4924 - Email: Support@4kequipment.com