





How to Stake-out a Line on Topcon V15 Pocket 3D


1. Tap “Tools” in the bottom menu then click “Stake-out”.

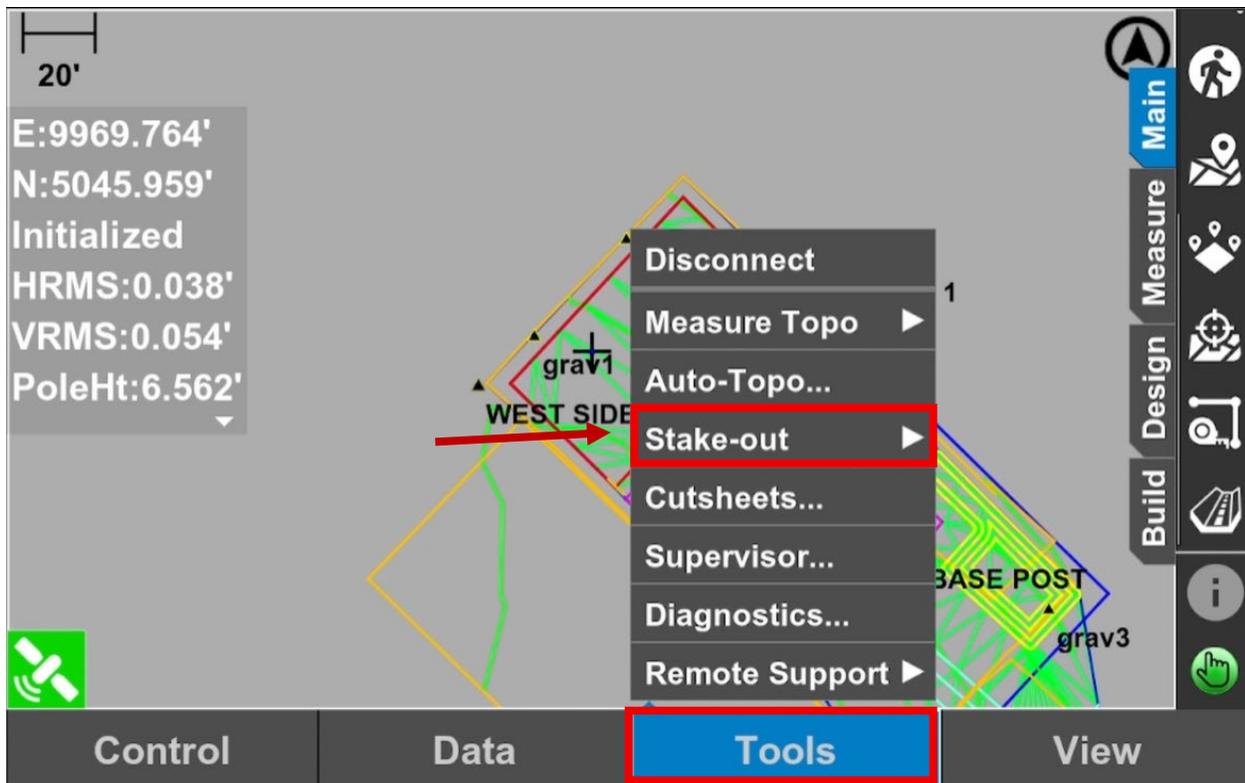


2. Select "Polyline".

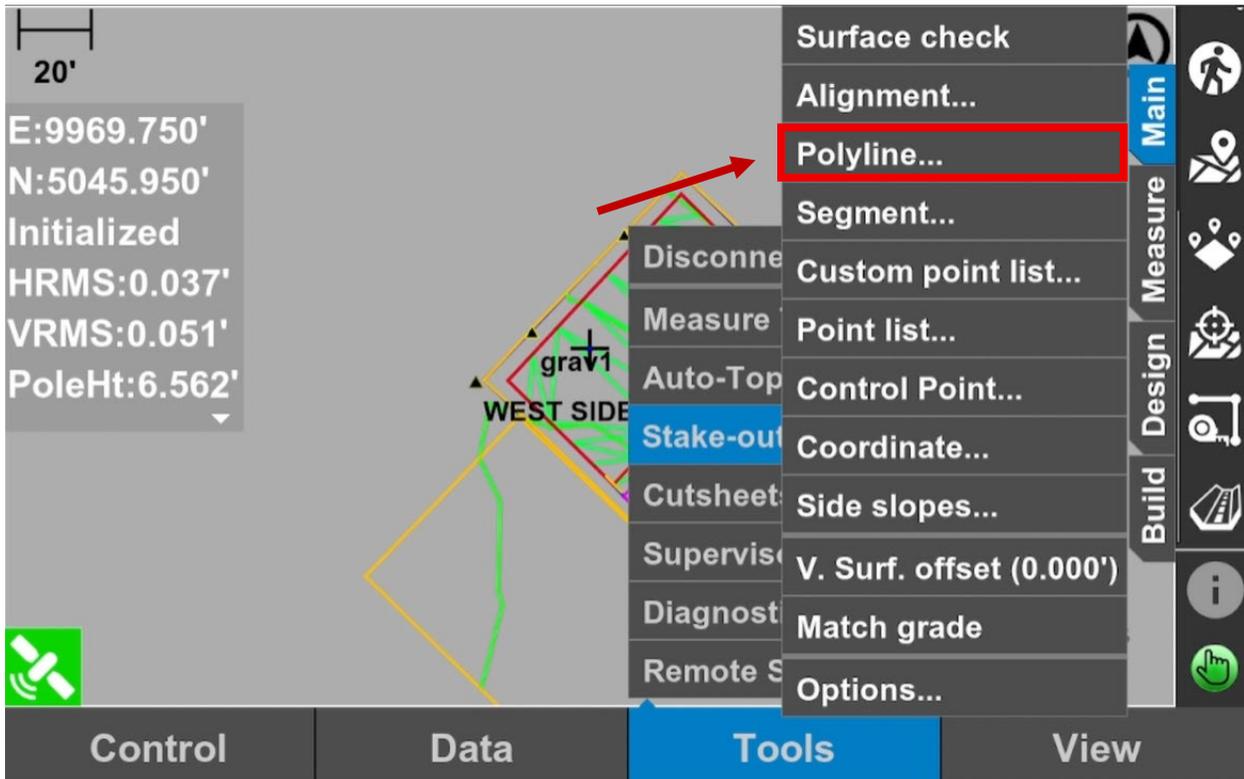


3. After clicking "Polyline" you'll see a map and you can select on the line. You'll see black lines once selected.

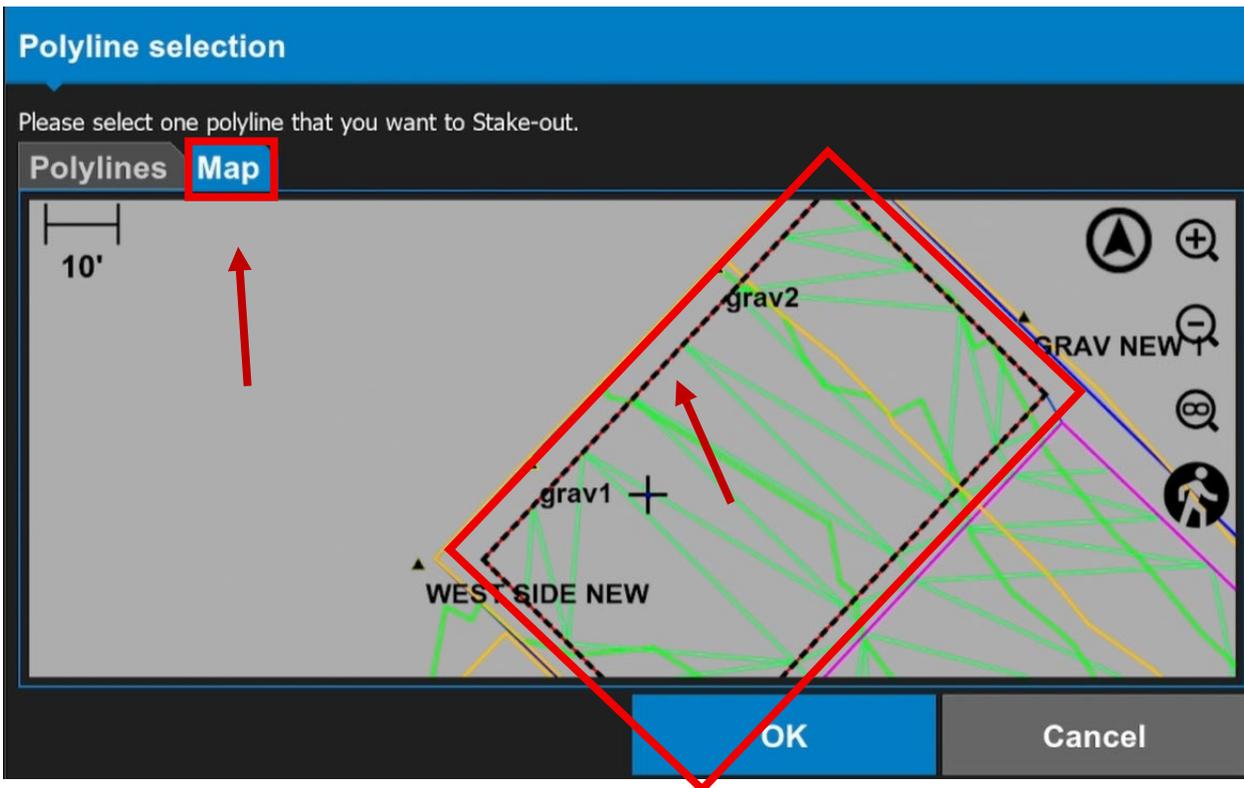


4. After selecting, tap "OK".

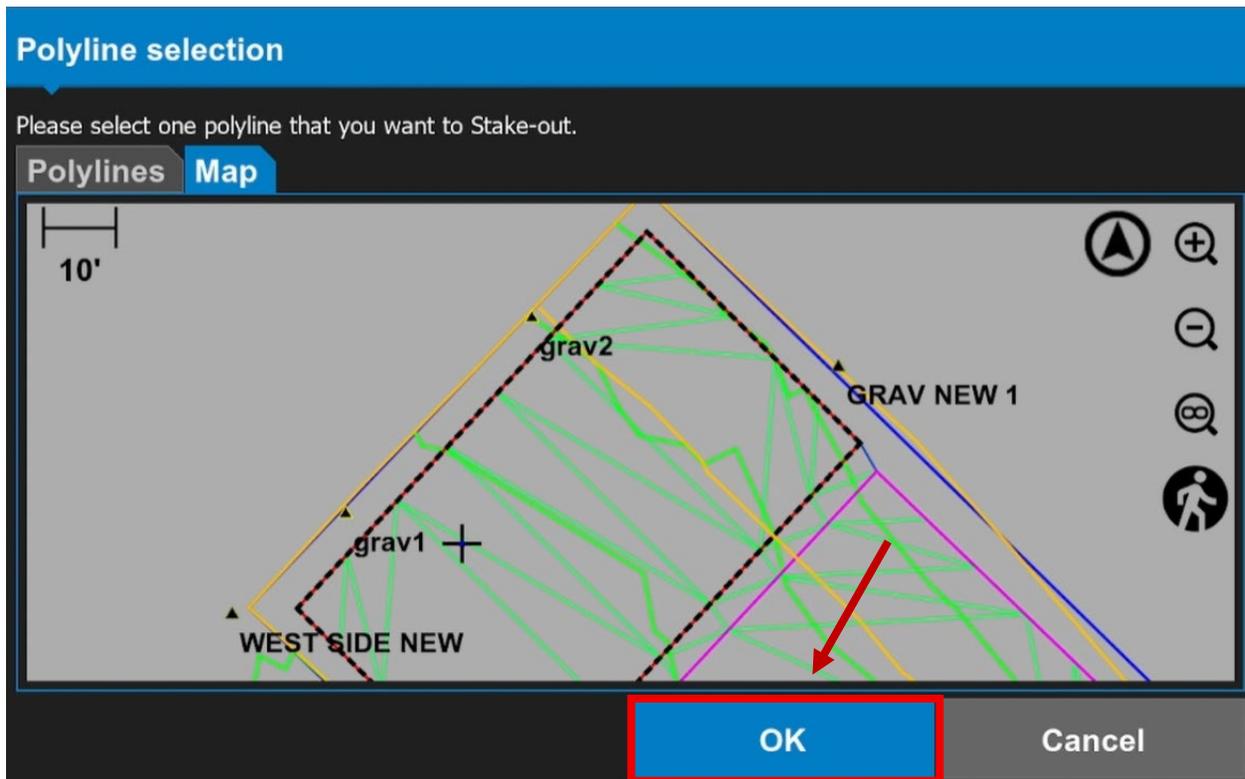


5. You can adjust the "Offset from polyline" to negative or positive offset.

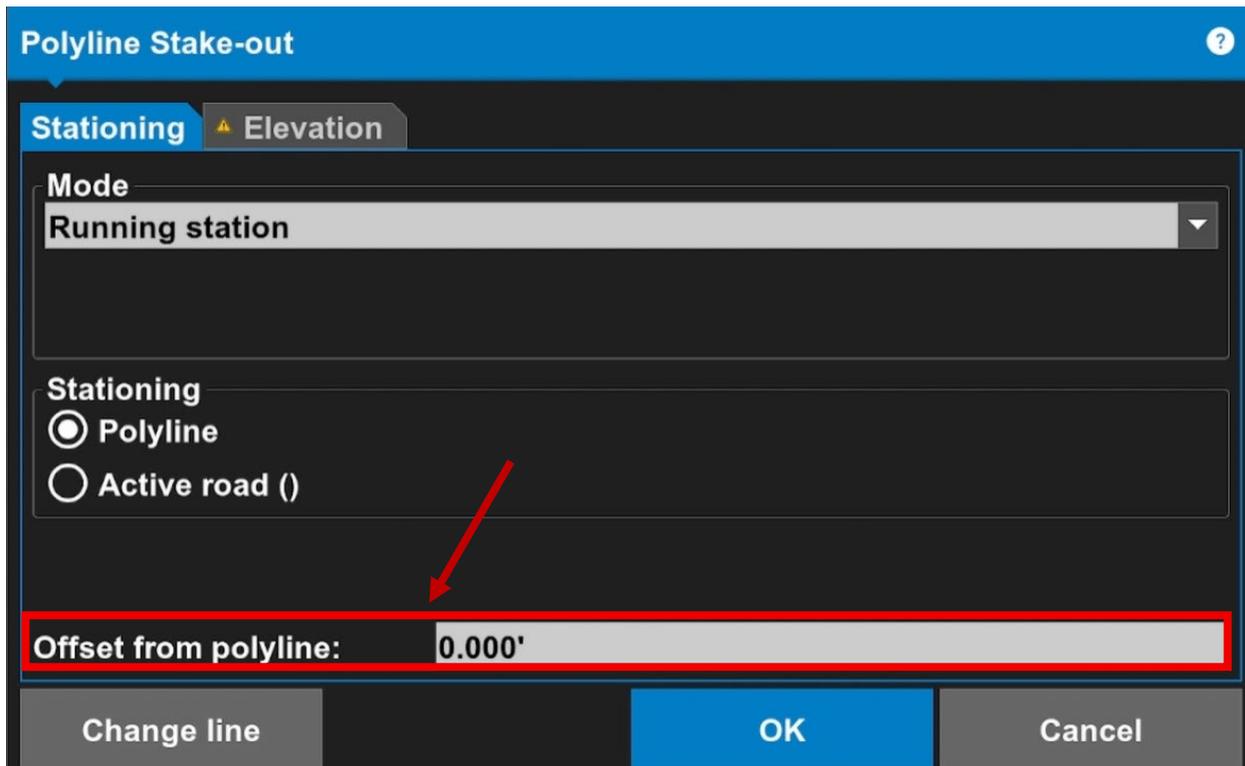


6. You can also adjust the “Vertical Offset” to negative or positive offset. Then tap “OK” after adjusting.

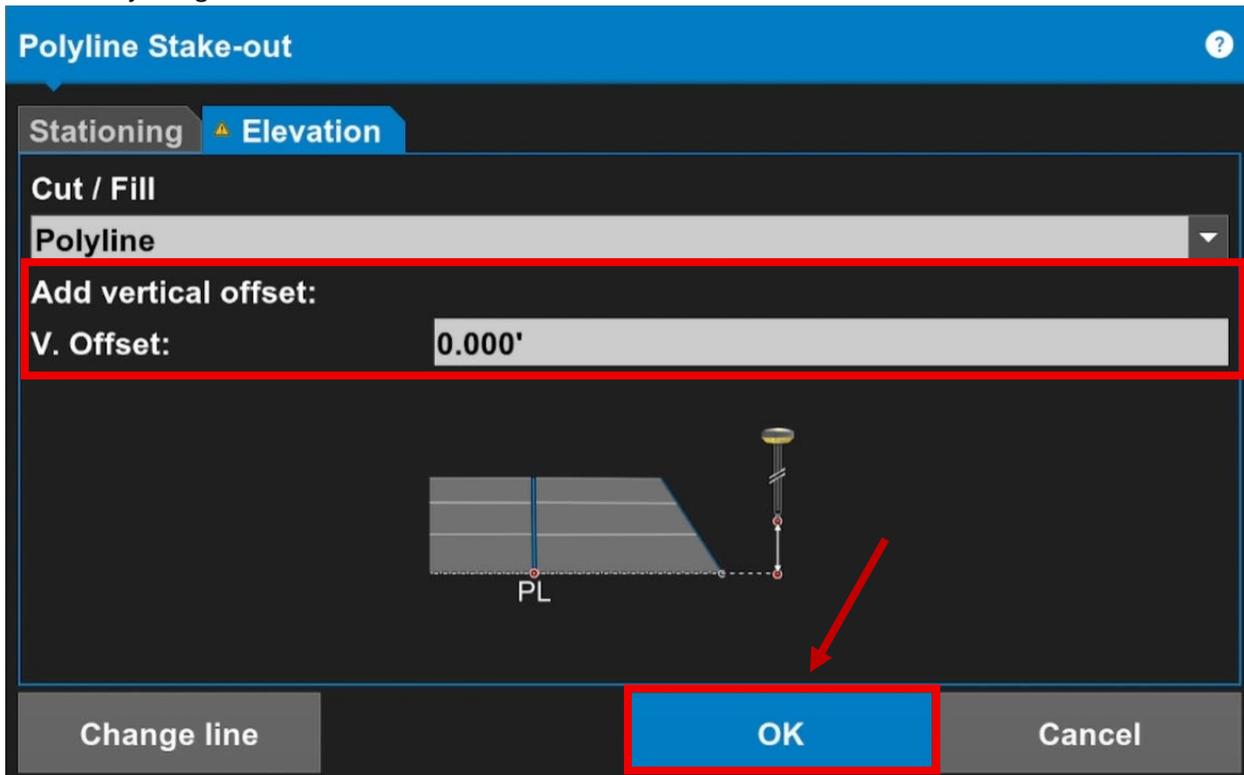


7. Then start walking over to your “Point Line”.

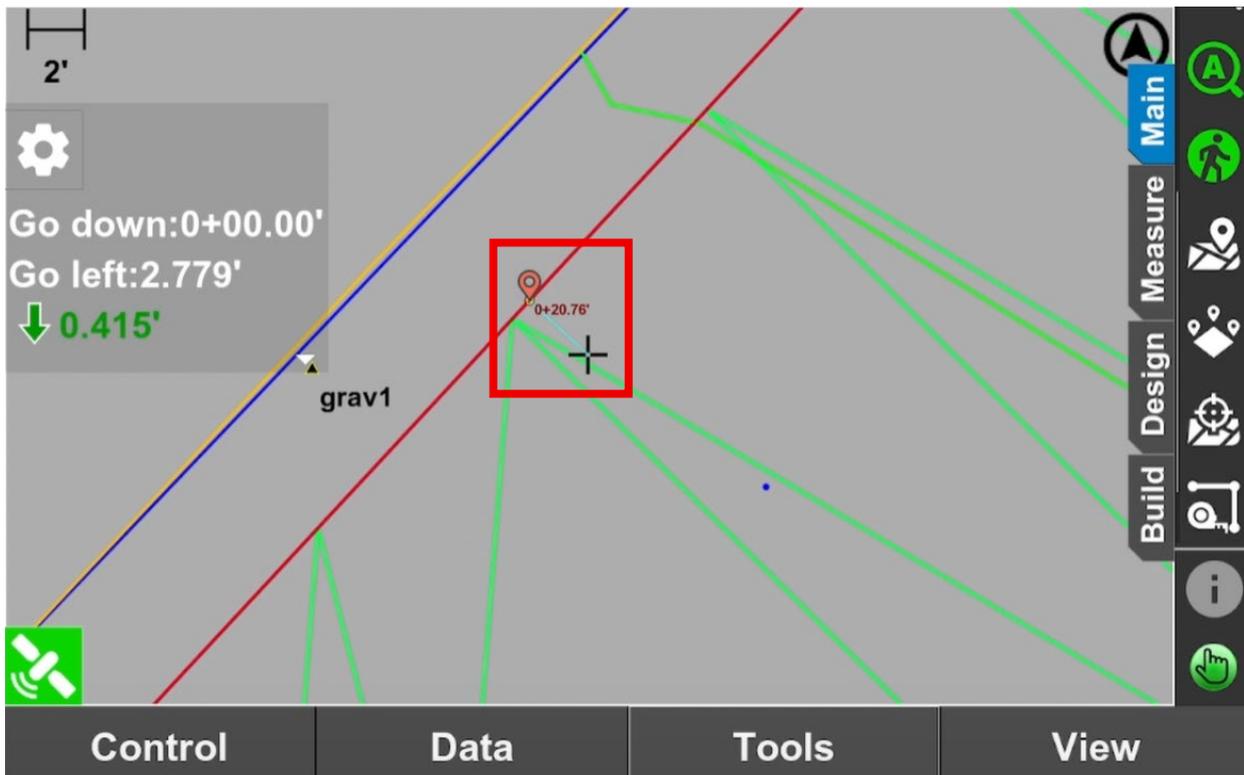

8. Follow the instructions on the top-left corner.

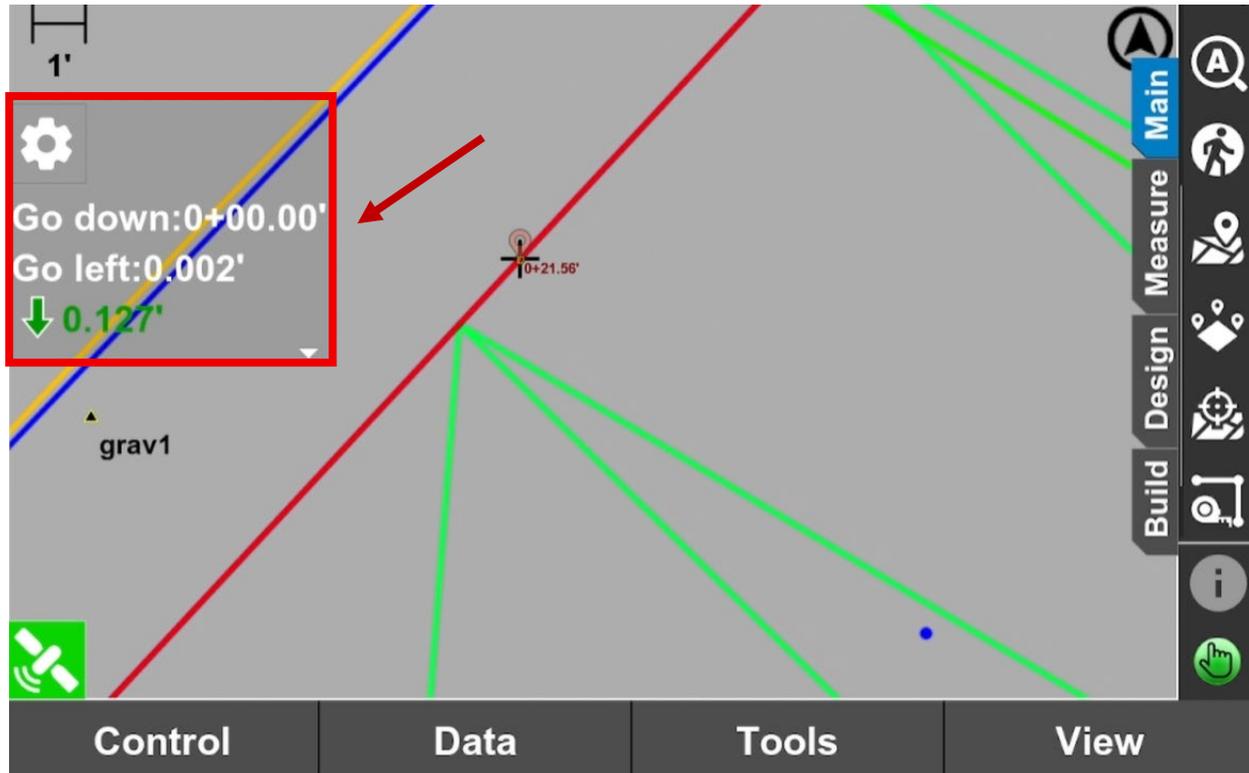

9. If you want to end measuring, just tap on "Tools", "Stake-out" then lastly, tap "Stop stake-out".

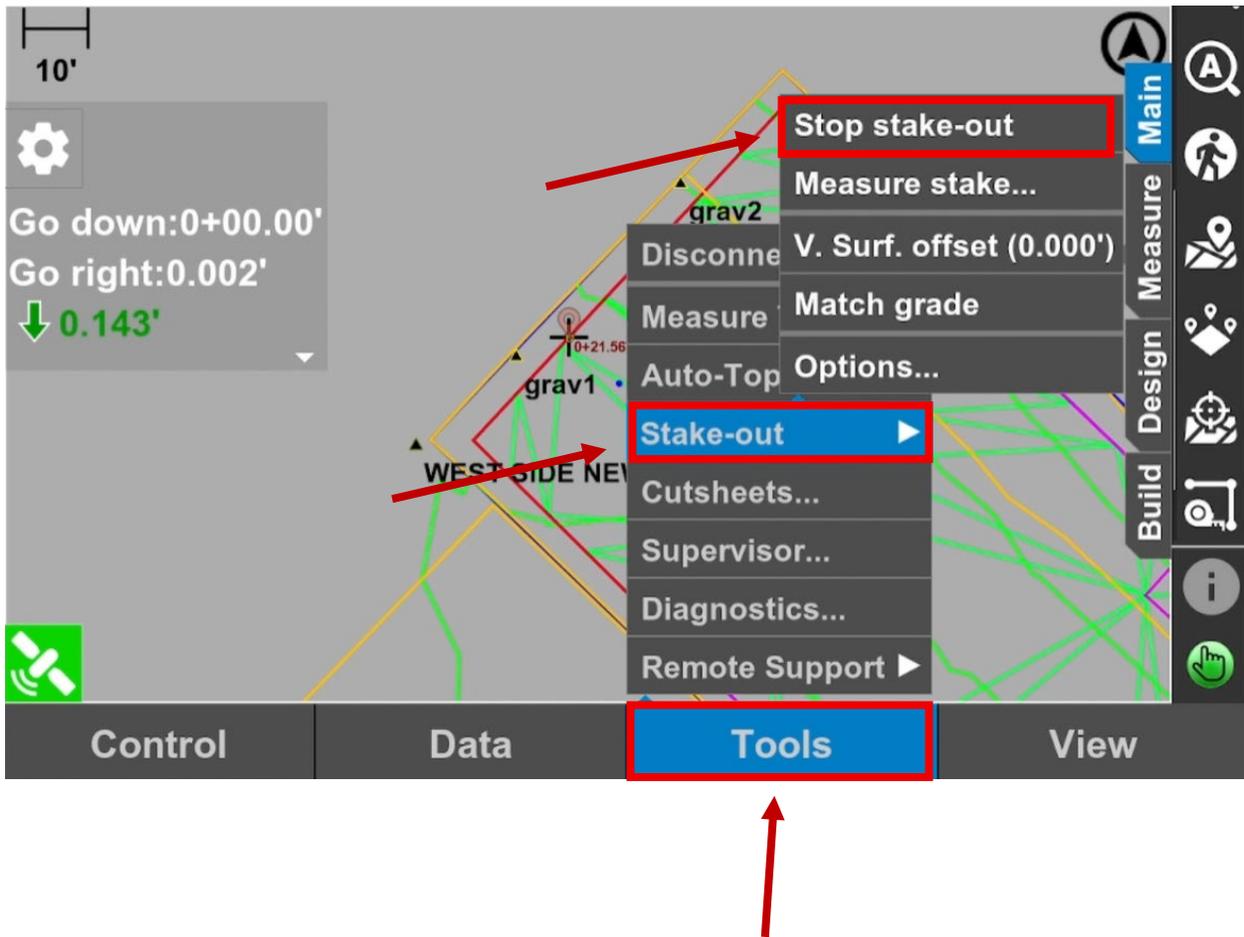

5900 NE 152nd Ave. Suite 120 Vancouver, WA 98682

Phone: (564) 274-0024 | Fax: (360) 635-4924 - Email: Support@4kequipment.com